

Preparing Specimens for Packaging



Central Laboratories




Insert tubes into absorbent pouch.



The pouch can hold up to 4 tubes.



Place large tubes on top of pouch.

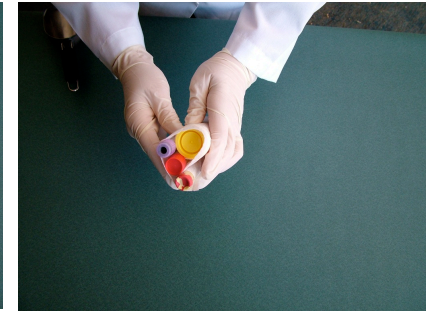

Roll absorbent pouch.



Place 1 pouch into 95kPa bio bag.



Insert requisition into outside pouch



Press bag to remove air.



Remove adhesive strip and seal bag.

Note: When specimens are to be shipped on dry ice, do not place requisition in 95kPa bag. Place requisitions on top of inner foam box in shipper